

**FUJIFILM**

DIGITAL CAMERA

**X-T30**

## **New Features Guide**

Version 1.40

Features added or changed as a result of firmware updates may no longer match the descriptions in the documentation supplied with this product. Visit our website for information on the updates available for different products:

*<https://fujifilm-x.com/support/download/firmware/>*

BL00005122-200 **EN**

## Contents

X-T30 firmware version 1.40 adds or updates the features listed below. For information on earlier versions, visit the following website.

<http://fujifilm-dsc.com/en/manual/>

No.	Description	X-T30 	See 	Ver.
1	The procedure for rating pictures has changed. As a result, the content of the playback information displays has changed and a <b>RATING</b> item has been added to the playback menu.	162, 163, 177	1, 2, 3	1.40
2	The <b>Q</b> (quick menu) button can now be used as an <b>Fn</b> (function) button.	204, 225, 228, 230	4, 5, 7	1.10
3	Movie recording can now be controlled from external devices, and the <b> CONNECTION</b> <b>SETTING &gt; PC CONNECTION MODE</b> item in the setup menu has consequently been renamed <b> CONNECTION MODE</b> .	218	8	1.20
4	The camera can now be used as a webcam. An <b>X WEBCAM</b> option has consequently been added to the <b> CONNECTION SETTING &gt; CONNECTION MODE</b> item in the setup menu.	218	8	1.40

# Changes and Additions

Changes and additions are as follows.


X-T30 Owner's Manual:  162

Ver. 1.40

## The Playback Display

This section lists the indicators that may be displayed during playback.



 For illustrative purposes, displays are shown with all indicators lit.

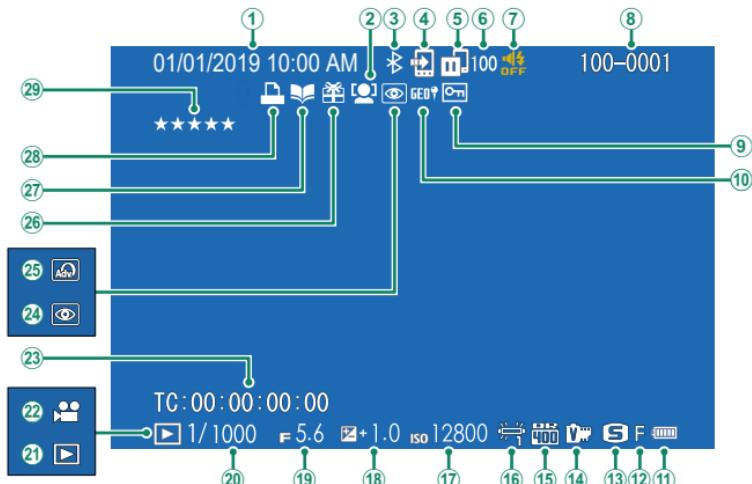

- ① Date and time
- ② Face detection indicator
- ③ Bluetooth ON/OFF
- ④ Image transfer order
- ⑤ Image transfer status
- ⑥ Number of frames selected for upload
- ⑦ Sound and flash indicator
- ⑧ Frame number
- ⑨ Protected image
- ⑩ Location data
- ⑪ Battery level
- ⑫ Image quality
- ⑬ Image size
- ⑭ Film simulation
- ⑮ Dynamic range

- ⑯ White balance
- ⑰ Sensitivity
- ⑱ Exposure compensation
- ⑲ Aperture
- ⑳ Shutter speed
- ㉑ Playback mode indicator
- ㉒ Movie icon
- ㉓ Time code
- ㉔ Red-eye removal indicator
- ㉕ Advanced filter
- ㉖ Gift image
- ㉗ Photobook assist indicator
- ㉘ DPOF print indicator
- ㉙ Rating.....3

The **DISP/BACK** button controls the display of indicators during playback.

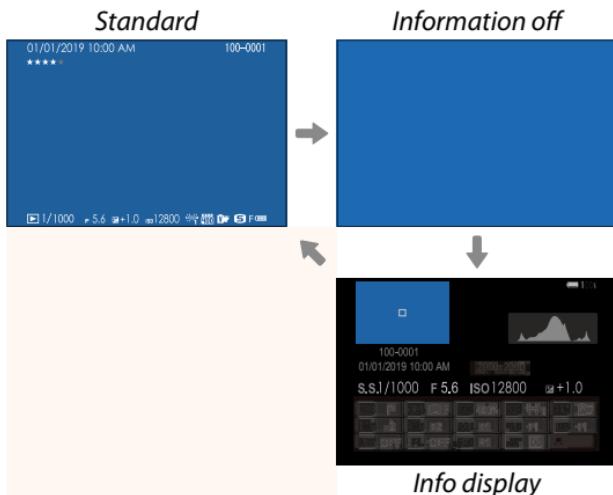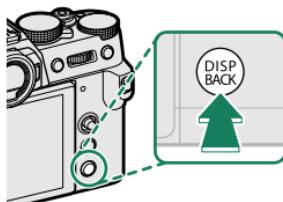

### Favorites: Rating Pictures

Pictures can be rated via the **RATING** item in the playback menu.

## RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").

 • The focus stick (focus lever) can be used in place of the front command dial to choose a picture.


- The rating dialog can also be displayed by pressing the **AE-L** button in single-frame, nine-frame, or hundred-frame playback.
- Use touch controls to zoom in or out.
- The following cannot be rated:
  - Protected pictures
  - Movies
  - "Gift" pictures (pictures taken with other cameras)

Press **Q** for quick access to selected options.

- Use **FUNCTION (Fn) SETTING** to choose the function performed by the **Q** (quick menu) button or assign its default function to other controls.
- To disable the **Q** (quick menu) button, select **NONE** for **FUNCTION (Fn) SETTING** > **Q BUTTON SETTING**.

## The Quick Menu Display

At default settings, the quick menu contains the following items:

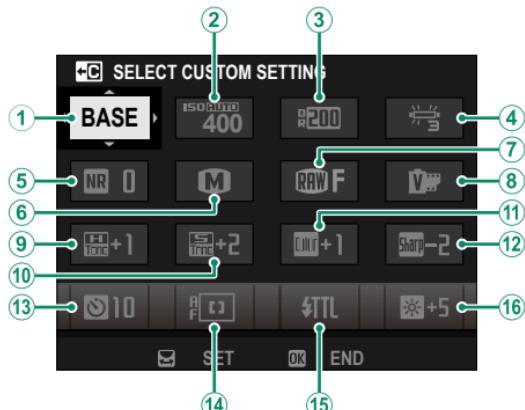

- ① SELECT CUSTOM SETTING
- ② ISO
- ③ DYNAMIC RANGE
- ④ WHITE BALANCE
- ⑤ NOISE REDUCTION
- ⑥ IMAGE SIZE
- ⑦ IMAGE QUALITY
- ⑧ FILM SIMULATION

- ⑨ HIGHLIGHT TONE
- ⑩ SHADOW TONE
- ⑪ COLOR
- ⑫ SHARPNESS
- ⑬ SELF-TIMER
- ⑭ AF MODE
- ⑮ FLASH FUNCTION SETTING
- ⑯ EVF/LCD BRIGHTNESS

Assign a role to the function buttons for quick access to the selected feature.

- The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.
- Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > T-Fn TOUCH FUNCTION**.


The default assignments are:

**Fn1 button**




*Performance*

**Q button**

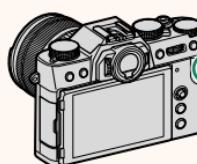

*Quick menu*

**AE-L button**

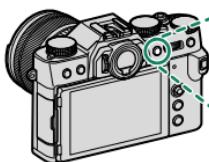


*AE lock only*

**AF-L button**




*AF lock only*

**T-Fn1 (flick up)**

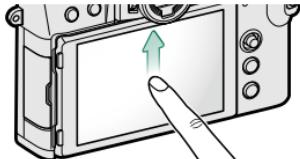


*Drive setting*

**T-Fn2 (flick left)**

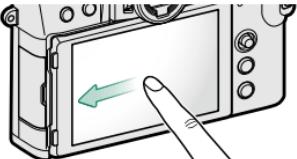


*Film simulation*

**T-Fn3 (flick right)**

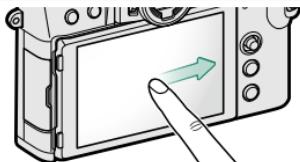


*White balance*

**T-Fn4 (flick down)**

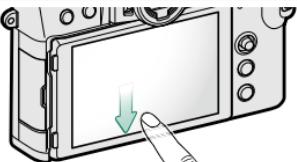

*AF mode*

**Center of rear command dial**

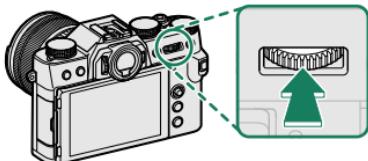

*Focus check*

**FUNCTION (Fn) SETTING****Assigning Roles to the Function Buttons**

**3** Highlight the desired role and press **MENU/OK** to assign it to the selected control. Choose from:

- IMAGE SIZE
- IMAGE QUALITY
- RAW
- FILM SIMULATION
- GRAIN EFFECT
- COLOR CHROME EFFECT
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- SELECT CUSTOM SETTING
- FOCUS AREA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
-  FACE SELECT 
- FACE DETECTION ON/OFF
- DRIVE SETTING
- SPORTS FINDER MODE
- PRE-SHOT 
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- IS MODE
- WIRELESS COMMUNICATION
- FLASH FUNCTION SETTING
- TTL-LOCK
- MODELING FLASH
- FULL HD HIGH SPEED REC
- ZEBRA SETTING
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- MOVIE SILENT CONTROL
- PREVIEW DEPTH OF FIELD
- PREVIEW EXP/WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- ELECTRONIC LEVEL
- LARGE INDICATORS MODE
- AE LOCK ONLY
- AF LOCK ONLY
- AE/AF LOCK
- AF-ON
- AWB LOCK ONLY
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SELECT PAIRING DESTINATION
- Bluetooth ON/OFF
- PLAYBACK
- QUICK MENU
- NONE (control disabled)

Adjust settings for connection to external devices.

Option	Description
<b>USB CARD READER</b>	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
<b>X WEBCAM</b>	The camera can be used as a webcam when connected to a computer running FUJIFILM X Webcam.
<b>SHOOTING AUTO*</b>	The camera's movie-recording features can be controlled from gimbals, drones, or other devices connected via USB. The camera automatically enters "tethered shooting" (i.e., remote-control) mode when the external device is turned on and returns to normal operation when the external device turned off or disconnected. The features available vary with the type of device connected.
<b>USB MOVIE SHOOTING FIXED*</b>	As for <b>USB MOVIE SHOOTING AUTO</b> , except that the camera remains in "tethered shooting" (remote-control) mode when the external device is off or not connected, allowing the device to resume control when the connection is re-established after an accidental disconnection or other disruption.
<b>USB RAW CONV./BACKUP RESTORE</b>	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. <ul style="list-style-type: none"><li>• <b>USB RAW CONV. (requires FUJIFILM X RAW STUDIO)</b>: Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images.</li><li>• <b>BACKUP RESTORE (requires FUJIFILM X Acquire)</b>: Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.</li></ul>

\* Rotate the drive dial to  (movie).

 **POWER MANAGEMENT > AUTO POWER OFF** settings also apply when the camera is connected to an external device. To prevent the camera turning off automatically, select **OFF** for **AUTO POWER OFF**.

 Visit the websites below to learn more about or download the following computer software:

- **Capture One Express Fujifilm:**

<https://www.captureone.com/products-plans/capture-one-express/fujifilm>

- **Capture One Pro Fujifilm:**

<https://www.captureone.com/explore-features/fujifilm>

- **FUJIFILM X Acquire:**

<https://fujifilm-x.com/products/software/x-acquire/>

- **FUJIFILM X RAW STUDIO:**

<https://fujifilm-x.com/products/software/x-raw-studio/>

- **RAW FILE CONVERTER EX powered by SILKYPIX:**

<https://fujifilm-x.com/support/download/software/raw-file-converter-ex-powered-by-silkypix/>

- **FUJIFILM X Webcam:**

<https://fujifilm-x.com/products/software/x-webcam/>

# FUJIFILM

---

**FUJIFILM Corporation**

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

<https://fujifilm-x.com>



Bluetooth®